

INSTALLATION/OPERATION/MAINTENANCE MANUAL FOR TYPE 24/24S MOONEY® RESTRICTOR

SCOPE

This manual provides installation, operation and maintenance instructions for the TYPE 24/24S MOONEY® RESTRICTOR. Instructions for the FLOWGRID® PILOT and VALVE will be found in separate manuals.

PRODUCT DESCRIPTION

The TYPE 24/24S MOONEY® Restrictor is an integral part of a pilot system for the FLOWGRID® Regulator. It is usually located in the pilot supply and affects the response rate, stability, and sensitivity of the regulator. The restrictor is available in both steel and stainless steel constructions with a stainless steel rotor. The TYPE 24/24S Restrictor can be used in many other liquid and gas applications.



Figure 1. Type 24 Mooney® Restrictor

INSTALLATION

The following instructions apply to mounting the TYPE 24/24S MOONEY® RESTRICTOR on the FLOWGRID® PILOT and connecting to the pilot system. Refer to the FLOWGRID® VALVE and PILOT I/O/M manuals for start up procedures.

WARNING

Personal injury, equipment damage, or leakage due to explosion of accumulated gas or bursting of pressure containing parts may result if this RESTRICTOR is overpressured or is installed where service conditions could exceed the limits given in the specification of the nameplate, or where conditions exceed any ratings of the adjacent piping or piping connections. Verify the limitations of valve, pilot, and restrictor to ensure these devices are not overpressured. To avoid such injury or damage, provide pressure relieving or pressure limiting devices (as required by Title 49, Part 192, of the U.S. code of Federal Regulations, by the National Fire Codes of the National Fire Protection Association, or by other applicable codes) to prevent service conditions from exceeding those limits. Additionally, physical damage to the valve/regulator could break the pilot or restrictor off the main valve, causing personal injury and/or property damage due to explosion of accumulated gas. To avoid such injury and damage, install the regulator in a safe location.

1. **PERSONNEL:** Installation of the Restrictor should be made by qualified personnel familiar with high pressure piping and pilot operated regulators.
 2. **PRIOR INSPECTION:** Inspect the Restrictor for any damage that might have occurred in shipping. If already mounted on a regulator make sure the regulator body, pilot lines, and inlet piping are clear and free of foreign material.
 3. **ORIENTATION:** The TYPE 24/24S MOONEY® Restrictor should be installed so that the adjustment indicator markings face the side of the regulator that provides easiest access for pilot adjustment and valve maintenance.
 4. **RESTRICTOR MOUNTING:** Apply pipe dope to the 1/4" NPT threads on the male end of the restrictor and screw directly into the INLET port of the PILOT.
- NOTE:** To avoid galling when stainless steel to stainless steel connections are made use a lubricant (such as NEVER SEEZ by Bostik,). For best results Lightly lubricate the female threads. Mixing the lubricant with pipe dope is also acceptable. When tightening do not exceed more than 1/4 turn past the point the threads start to bind.
5. **RESTRICTOR INLET:** A Filter (such as the TYPE 30 MOONEY® FILTER) upstream of the restrictor is recommended. Run 3/8 inch tubing from the supply tap to the inlet of the restrictor.

START UP AND OPERATION

1. Adjustment of the restrictor affects the response rate, stability, and sensitivity of the regulator. CLOSING the pilot restrictor (moving adjustment towards MIN setting) will result in higher gain (narrower proportional band), more sensitivity, and slower closing speeds. OPENING the pilot restrictor (moving the adjustment towards MAX setting) will result in less gain (increased proportional band), less sensitivity, and faster closing speeds.

NOTE: The TYPE 24/24S MOONEY® Restrictor itself does not require any special start up procedures.

2. **START UP - ALL REGULATORS:** Generally widening the proportional band when initially starting up a regulator (restrictor setting of "4" or higher) is recommended. This will insure maximum stability when starting the regulator. Consult the instruction manual for the valve and pilot being used.

MAINTENANCE

Restrictor parts are subject to normal wear and must be inspected and replaced as necessary. The frequency of inspection and replacement of parts depends on severity of service conditions or the requirements of local, state, and federal regulations.

WARNING

Before disassembly make sure the regulator and restrictor have been isolated from the process by closing block valves on the inlet and outlet sides of the regulator. Safely release pressure and process fluid from body and pilot system. Failure to properly complete these steps may result in personal injury and property damage.

WARRANTY

LIMITED WARRANTY: Seller warrants title and that the goods manufactured by the Seller will be free from defects in materials and workmanship under normal use and service until the expiration of the earlier of twelve (12) months from the date of initial operation or eighteen (18) months from the date of shipment by Seller. Resale goods shall carry only the warranty extended by the original manufacturer to the original purchaser. If, within thirty (30) days after Buyer's discovery of any warranty defects, Buyer notifies Seller in writing, Seller shall, at its option, promptly repair or replace F.O.B. point of manufacture, that portion of the goods found by Seller to be defective. Goods repaired and parts replaced during the original warranty period shall be in warranty for the remainder of the original warranty period. This warranty is the only warranty made by Seller and can only be amended by a written instrument signed by an officer of Seller. Subject to this warranty and except as expressly provided **IN SALES LITERATURE, DRESSER MOONEY CONTROLS, DRESSER INC. MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, AS TO MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE, OR ANY OTHER MATTER WITH RESPECT TO ANY OF THE PRODUCTS.**

While the information in this manual is presented in good faith and believed to be accurate, Dresser Pressure Regulation Group, Dresser, Inc. does not guarantee satisfactory results from reliance on such information. Dresser Pressure Regulation Group, Dresser, Inc. reserves the right, without notice, to alter or improve the designs or specifications of the products described herein.

Mooney

Dresser, Inc.

2822 S. 1030 W.

Salt Lake City, Utah 84119

Phone: 801.487.2225 Fax: 801.487.2587

www.mooneycontrols.com

DISASSEMBLY


1. After depressurizing main valve, pilot system and restrictor remove Rotor assembly by loosening Rotor Retainer.
2. Inspect Rotor and O-Rings for defects and replace if necessary.

ASSEMBLY

1. Lubricate O-Rings with Parker O-Lube₁ (or equivalent petroleum based lubricant) and place one on the Rotor Core and one on the Rotor Retainer.
2. Install Rotor Core back into the Restrictor Body and screw Rotor Retainer with O-Ring into place snugly.

NOTE: Overtightening an O-Ring Joint will not improve the seal. Screw in until metal parts make contact and snug slightly.

Figure 2

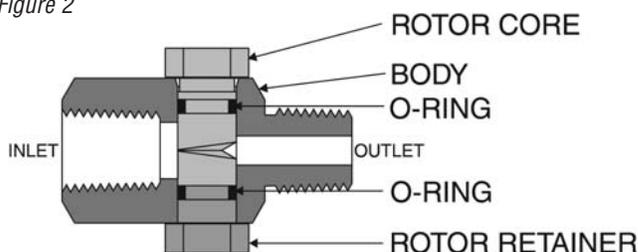

Type 24, 24S MOONEY® Restrictor Parts List

Item	Description	Material	Part No.	QTY
1	Body	Steel(ANSI 1215)	240-002-01	1
		301 Stainless Steel	240-002-02	
2	Rotor Core	301 Stainless Steel	240-007-01	1
3	Rotor Retainer	301 Stainless Steel	240-006-01	1
4	O-Ring			2
		Nitrile	021-011-01	
		Viton	021-011-02	

Table 1

